

bRite Standard

Quick and Handy – Mobile Smartness



Quick Workflow

- The quick price and function keys on the advanced membrane keyboard speed up the workflow and reduce operation time.
- An exchangeable preset card enables the user to customize the 16 preset keys.



Easy to Read

- The three displayed lines are very clear and easy to read.
- The backlight can be switched on or off according to the ambient lighting and to save power, the scale automatically goes into the sleep mode when not in use.



Ergo Grips

Two ergonomic grips on the lower side of the scale combined with its light net weight of only 4.2 kg make it extremely easy to transport.



Smart Mobile Business

For complete mobility, the scale can run via rechargeable battery. Every scale order includes a rechargeable battery* with a long-lasting operation time of up to 140 hours.

With built-in cable storage, the work area is kept tidy, transportation is simple and the risk of mislaying the power cable is eliminated.



bRite Standard

bRite is a stylish, portable retail scale suited to a range of retail environments such as open markets, mobile business or smaller specialty shops. Its robust yet lightweight construction, including a high quality stainless steel plate, make it perfect for environments where food hygiene, portability and sturdiness are prerequisites.

Coupled with its high quality weighing technology, bRite is a reliable and long lasting investment. Using the scale is also fast and effortless thanks to its ergonomic keyboard layout and simple user interface – thus speeding up customer service in all applications.

Available as compact or tower* version, this scale is an artwork that brings in line a slim silhouette design with a trapezoidal platform shape. Its black soft-rubber feet emphasize stability and show the groundedness of our bRite series that are all part of a harmonized colour and industrial design integration of housing, keyboard, display, plate and feet architecture.

*Not available in all countries.

bRite Standard

Price Computing Scale

Reliable performance

METTLER TOLEDO's long-term experience in engineering precise weighing instruments ensures fast customer transactions and long-lasting performance. bRite stands for customer-friendly functionality and operation.

High quality standards, safety and environmental care

bRite includes high quality weighing technology and is approved and certified by weights and measures authorities. This means that it maintains the highest accuracy and allows quick data signal processing. This precision scale complies with the latest industry standards including 10V/m OIML regulations – a real investment in electromagnetic security ahead of time. Additionally, features like the power adapter with Power Efficiency Level V and RoHS compliant components show our commitment to electronic safety, accuracy and environmental care.

Robust and mobile

Items of various shapes and sizes can be weighed easily thanks to the large, robust stainless steel weighing plate. The high quality of the stainless steel means it is water resistant and easy to keep hygienic. For even greater protection, optional scale and PLU covers are available. Given the fact that every scale can be run with a rechargeable battery, mobile business is possible whenever, wherever.




Specifications

Model Options*	bRite Standard compact versions: 12 kg/2 g, 15 kg/5 g, 6/15 kg/2/5 g
Display	LCD with backlight; 6-digit weight, 6-digit unit price, 6-digit total price
Key	32 membrane keys
Preset key	16 keys: one key can store one PLU
Stainless steel pan	240 x 337 mm (trapezoid)
PLU quantity	50
Power	Power adapter: 100~240VAC, 50/60Hz Battery: 6VDC/4.5AH lead-acid rechargeable battery (included*)
Gross weight/Net weight	Gross weight: 6.1kg / Net weight: 4.2kg
Shipping box (L x W x H)	480 x 465 x 180 mm
Working environment	Temperature: -10°C ~ +40°C; Humidity: 85%RH, non-condensation
Storage environment	Temperature: -25°C ~ +50°C; Humidity: 85%RH, non-condensation
Weighing function	Zero, Tare, 100g*, Change*, Hold*, Euro*, 1/2lb*, 1/4lb*, kg/lb*
Communication	None
Accessories	<ul style="list-style-type: none"> • Lead acid rechargeable battery • Plastic cover for pan • Plastic cover for housing • Deep plate

*Not available in all countries.

Dimensions

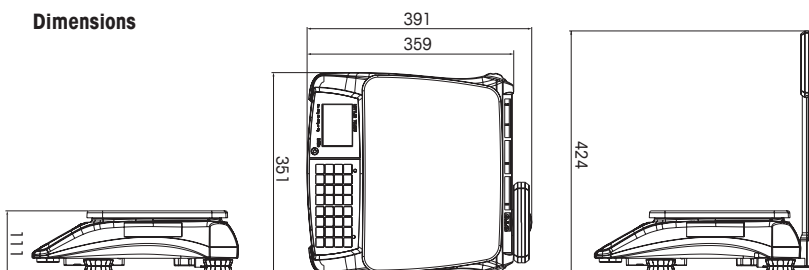

www.mt.com

For more information



ISO 9001 Quality management certification
ISO 14001 Environmental management certification
Internet: <http://www.mt.com>
Worldwide service

Subject to technical changes.
© 09/2020 Mettler-Toledo AG
Global MarCom Switzerland

